

# AutoMARK Voting Instructions

Ask the precinct election officials for assistance if you need help using the AutoMARK. You may change the text size and color by using the “Zoom In/Out” and “high contrast” buttons. You may also use headphones to hear the ballot read aloud. The AutoMARK allows you to control the volume and speed at which the ballot is read by using the “-” and “+” volume and tempo buttons on the keypad.

## 1. Insert the ballot in the AutoMARK.

## 2. Mark your ballot.

Touch the oval or name next to your choice.

Each office title lists the number of candidates for which you may vote. Do not mark more ovals than that number. You may choose to vote for fewer candidates, or you may skip any race.

If you mark too many ovals in a race, the votes for that race cannot be counted. The other correctly marked races will be counted.

To change a vote, touch the oval or name again. This will cancel your choice, and then you may mark another choice.

## 3. Review your ballot.

After reviewing your ballot, touch “Mark Your Ballot” in the center of the screen. When the screen reads “Remove Ballot,” pull firmly on the ballot to remove it.

## 4. Cast your ballot.

Place your ballot in the secrecy folder and take it to the ballot scanner.

Insert your ballot into the ballot scanner.

If the ballot scanner rejects your ballot, notify a precinct election official.